SELECT ELEMENTS

Modified on: Wed, 18 Sep, 2019 at 9:37 PM

Select Elements

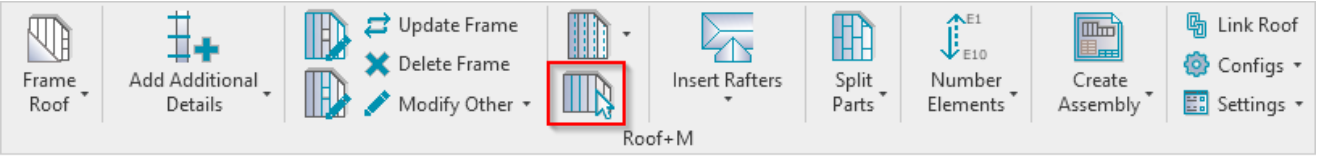

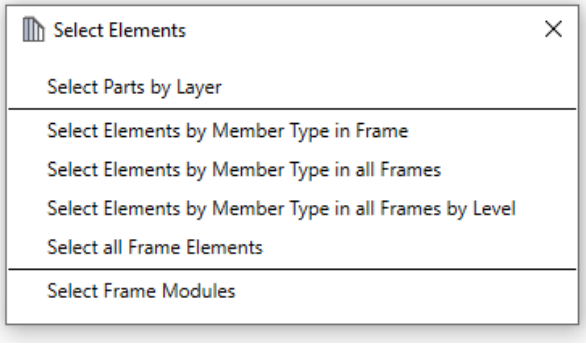

Select Elements – features for quickly selecting elements by different rules.

Select Parts by Layer

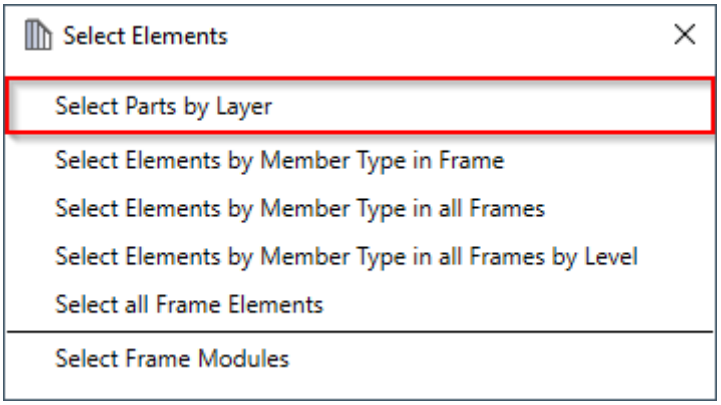

Select Parts by Layer – selects main parts in the framed roof.

Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

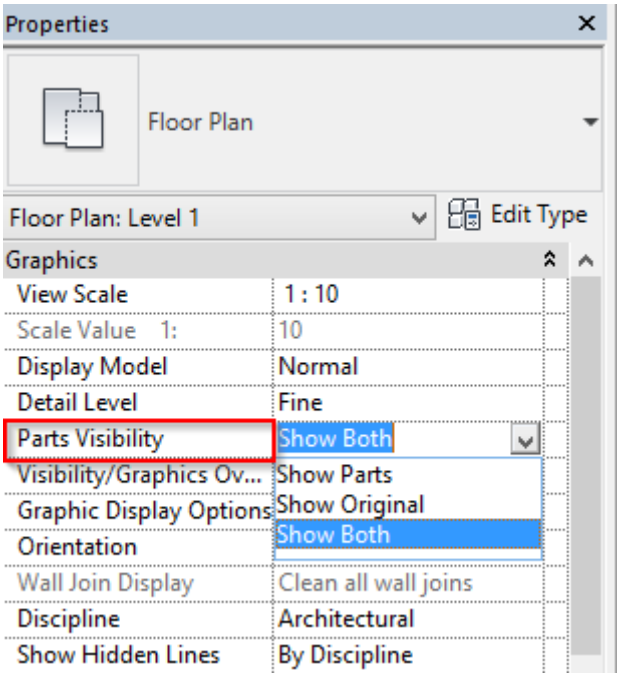

*Example: Click **Select Parts by Layer** and you will be able to select only main parts from the framed roof:*

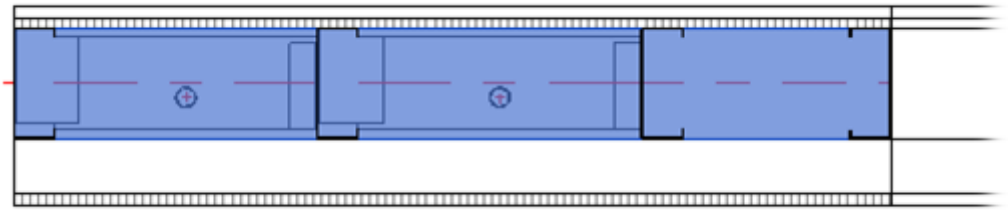

Select Elements by Member Type in Frame

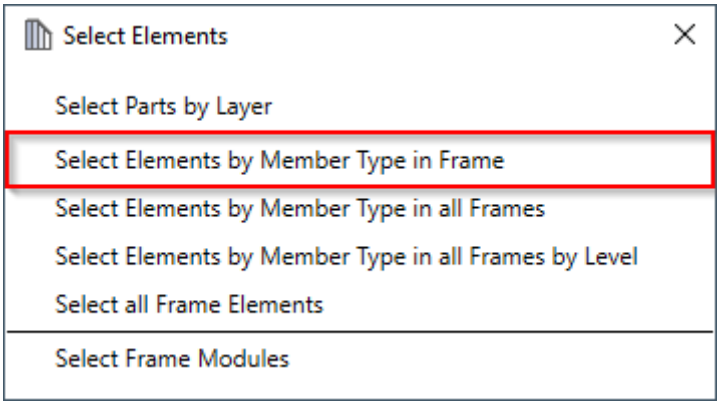

Select Element by Member Type in Frame – selects all framing members of the same type from the frame.

*Example: Select any joist → **Select Element by Member Type in Frame** → All joists from the frame will be selected:*

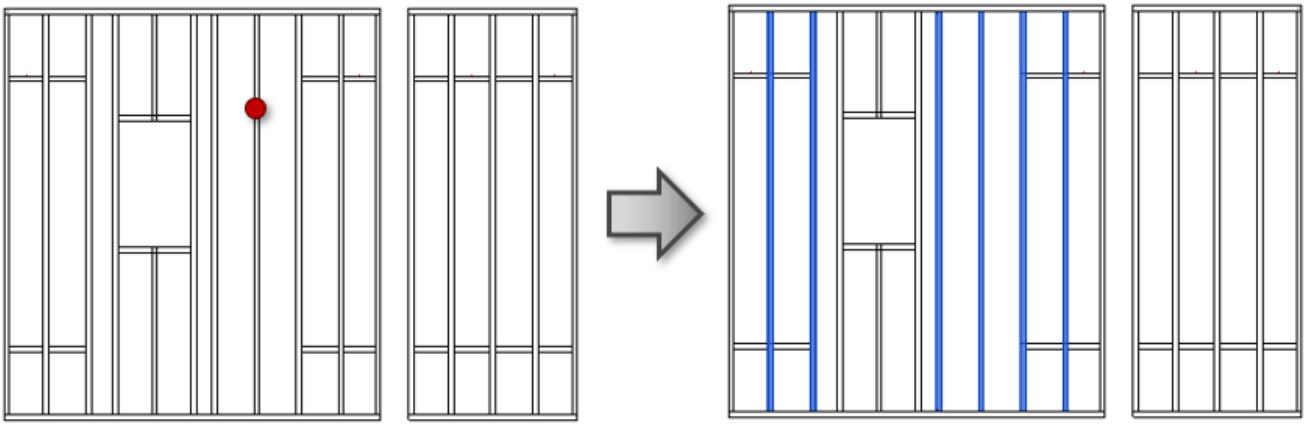

Select Elements by Member Type in all Frames

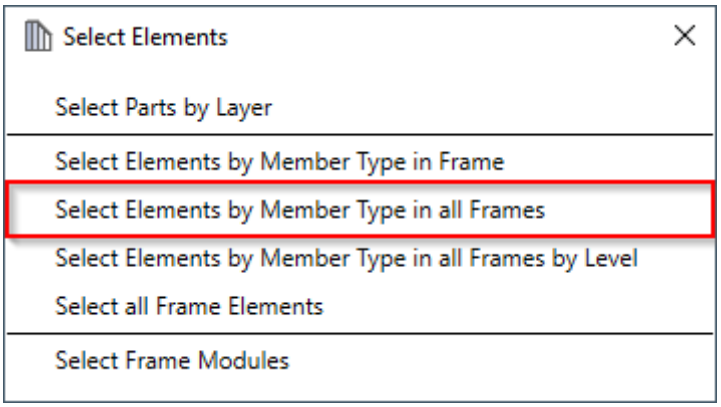

Select Element by Member Type in all Frames – selects all framing members of the same type from all frames in the project.

*Example: Select any joist → **Select Element by Member Type in all Frames** → All joists from all frames in the project will be selected:*

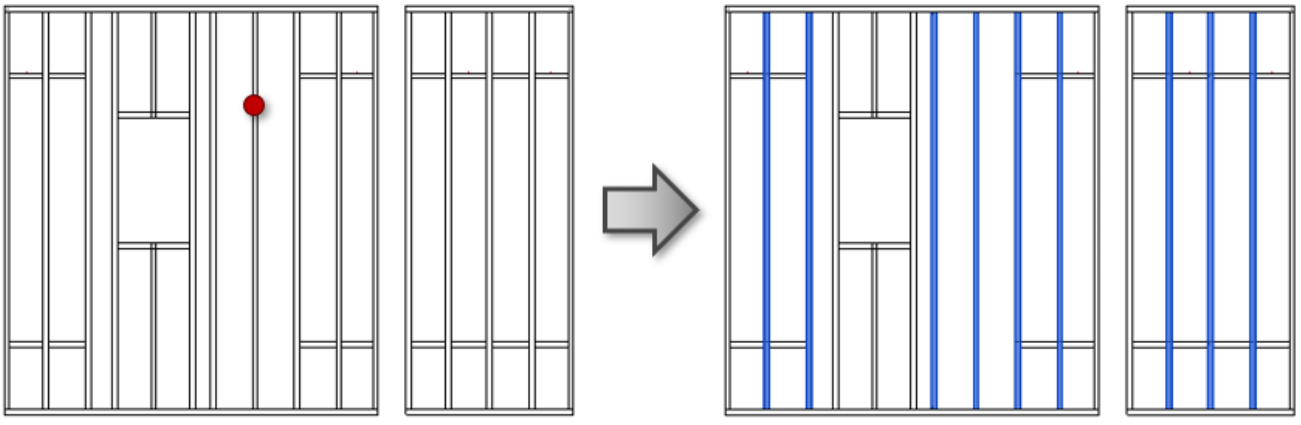

Select Elements by Member Type in all Frames by Level

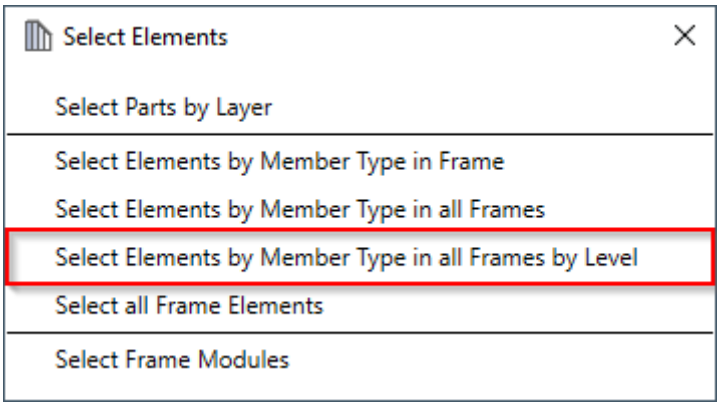

Select Element by Member Type in all Frames by Level – selects all framing members of the same type from all frames in the same level.

*Example: Select any joist → **Select Element by Member Type in all Frames by Level** → All joists from all frames in the same level will be selected:*

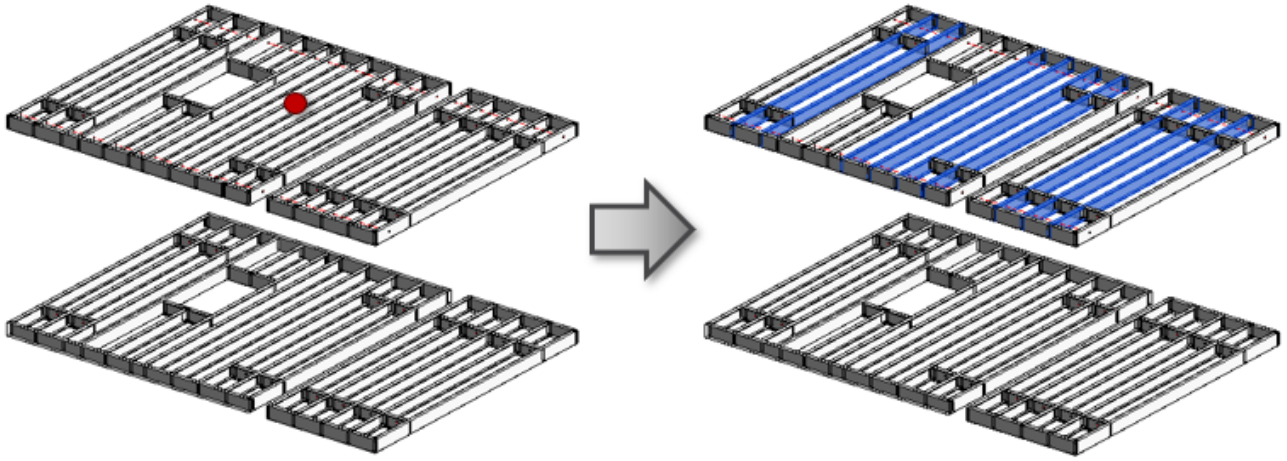

Select all Frame Elements

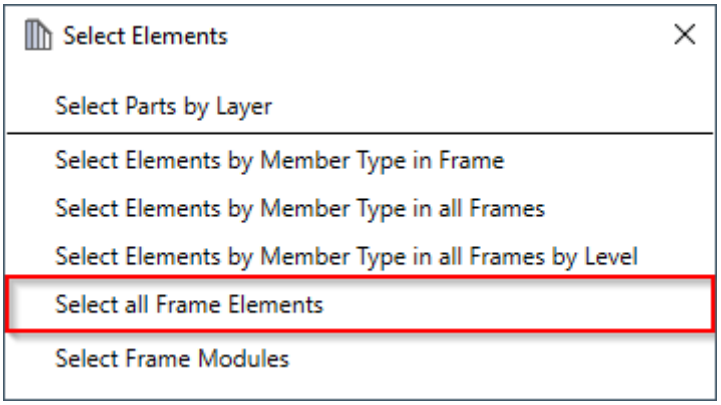

Select all Frame Elements – selects all framing members from the roof.

*Example: Select any joist → **Select all Frame Elements** → All elements, including joists, plates, trimmers, etc. will be selected:*

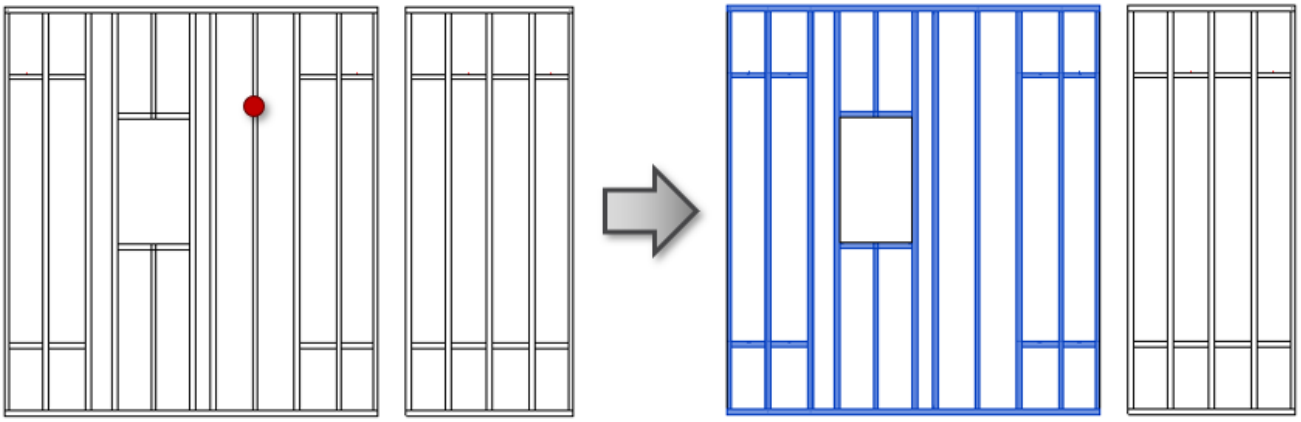

Select Frame Modules

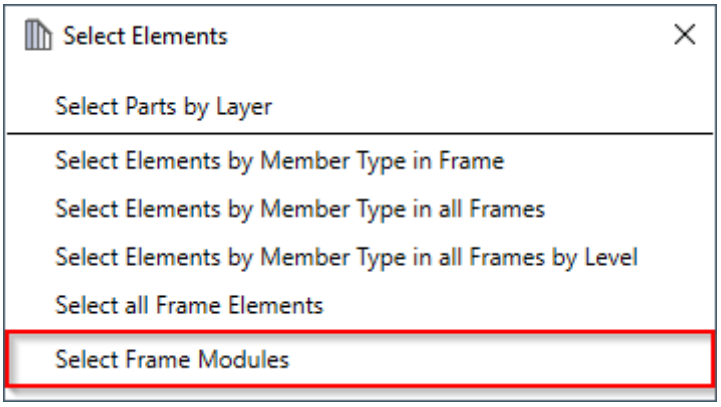

Select Frame Modules – selects preassembled elements.
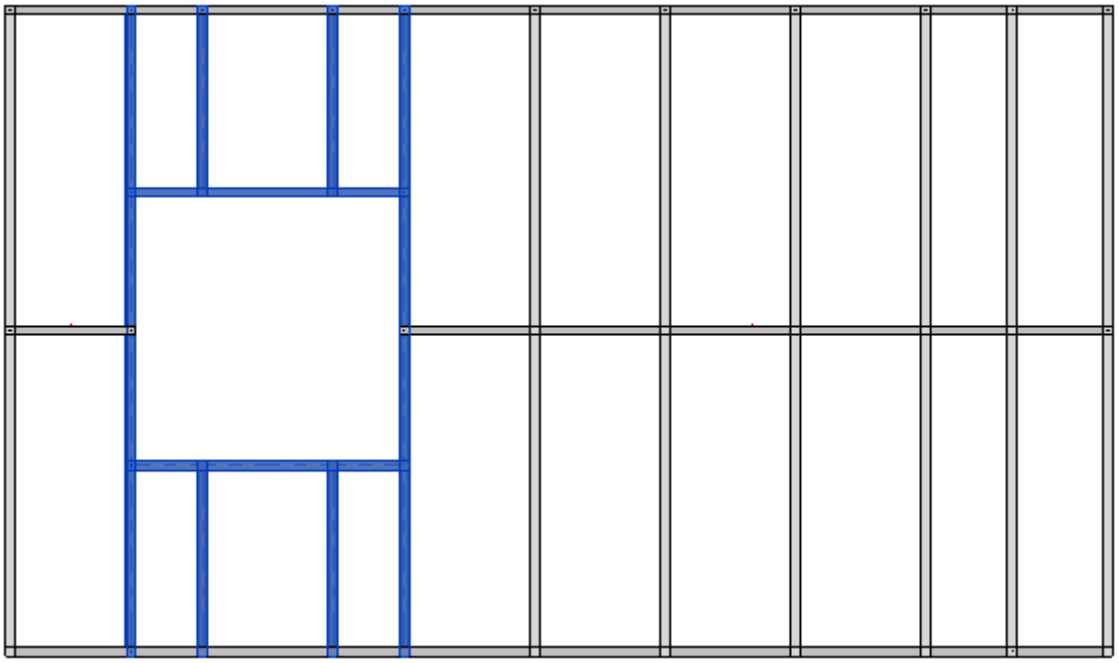
*Example: Select any joist → **Select Frame Modules** → All elements set as preassembled are selected, like opening kings, trimmers, cripples, etc.:*